


Locations

Locations of remote control buttons

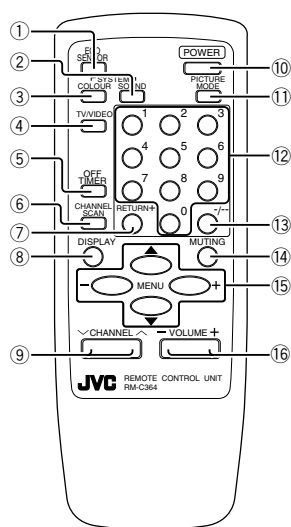


- | | |
|--|-----------|
| ① ECO SENSOR button | p.17 |
| ② SOUND SYSTEM button | p.15 |
| ③ COLOUR SYSTEM button | p.15 |
| ④ TV/VIDEO button | p.14 |
| ⑤ OFF TIMER button | p.17 |
| ⑥ CHANNEL SCAN button | p.18 |
| ⑦ RETURN + button | p.18 |
| ⑧ DISPLAY button | p.17 |
| ⑨ CHANNEL $\nabla/\wedge$ buttons | p.12 |
| ⑩ POWER button | p.6,12,13 |
| ⑪ PICTURE MODE button | p.15 |
| ⑫ Number buttons | p.12 |
| ⑬ $-/--$ button | p.12 |
| ⑭ MUTING button | p.16 |
| ⑮ MENU buttons | |
| • MENU $\blacktriangle/\blacktriangledown$ buttons | |
| • MENU $-/+$ buttons | |
| ⑯ VOLUME $-/+$ buttons | p.13 |


Locations

Locations of front panel buttons and lamps

<AV-14FT>

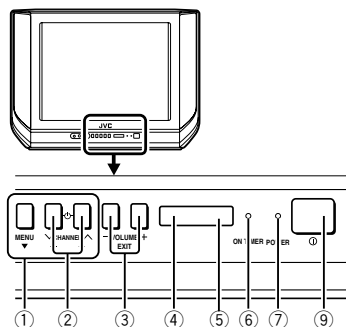

<AV-14AT>

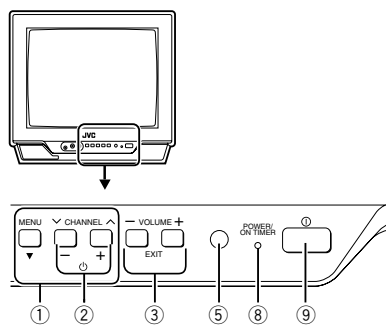

- | | |
|-----------------------------------|------|
| ① MENU buttons | p.22 |
| • MENU button | |
| • MENU $-/+$ buttons | |
| ② CHANNEL $\nabla/\wedge$ buttons | p.13 |
| ③ VOLUME $-/+$ buttons | p.13 |
| ④ ECO sensor | |

- | | |
|-------------------------|-----------|
| ⑤ Remote control sensor | |
| ⑥ ON TIMER lamp | p.19 |
| ⑦ POWER lamp | p.6,13 |
| ⑧ POWER / ON TIMER lamp | p.6,13,19 |
| ⑨ Main power button | p.6,13 |